


PITCHING GAZEBO TENT 4*4m

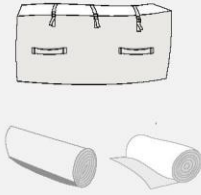


Contents of the

- 1) Body Saddlebag (1 Piece)
- 2) Frame Saddlebag (1 Piece)

Contents of the Body


Explanation	Piece
Body	1
Side Wall	2
Front Door	1
Rear Wall	1

Contents of the Frame Saddlebag

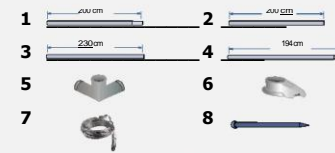

No	Explanation	Piece
1	Shirred Roof Pipe	4
2	Flat Roof Pipe	4
3	Foot Pipe	4
4	Middle Pole (With Lower and Upper	1
5	Triple Elbow	4
6	Foot Shoe	4
7	Tension Rope (Steel Rope)	2
8	Nail Pile	4


1) FRAME

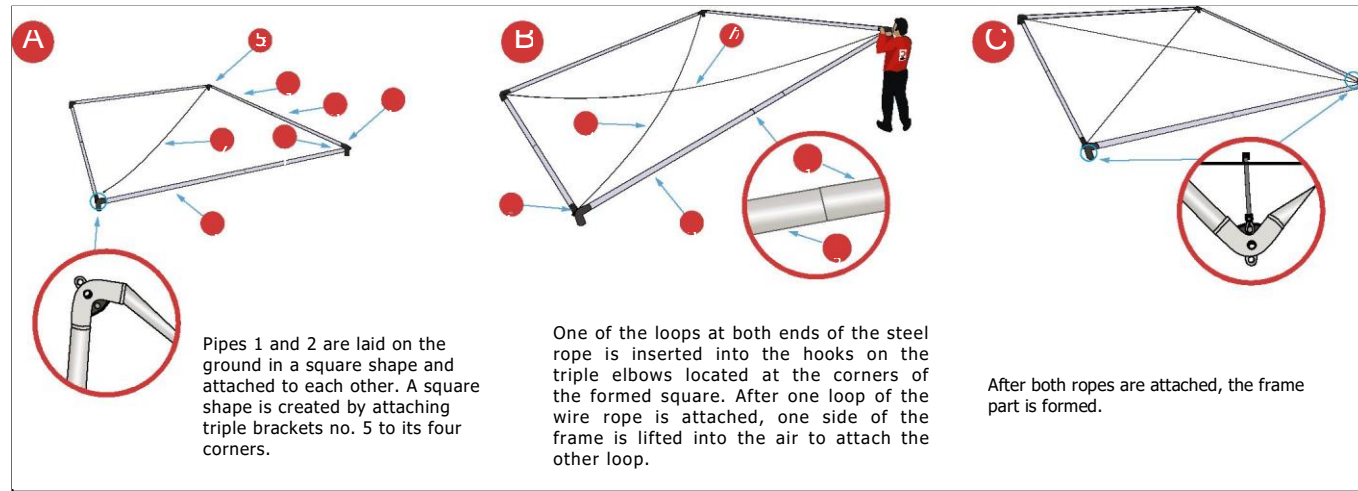


2) DRESSING THE TOP TARPAULIN

Side curtains are attached to the formed frame, respectively, by means of textile zippers. (Picture A)

After the 4 side curtains are attached to the frame, the upper tarpaulin is laid on the top of the frame. (Picture B)

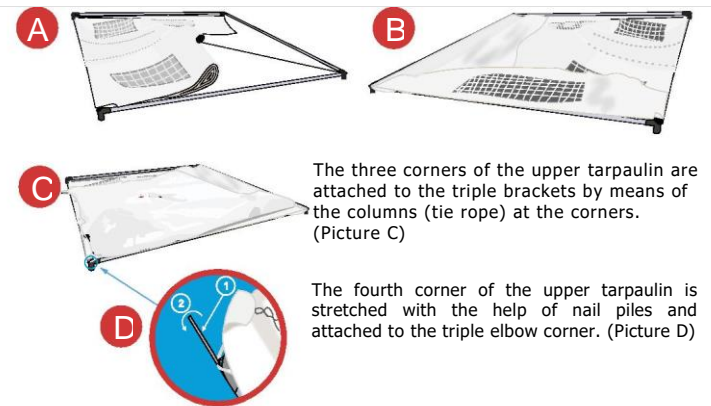

3) INSTALLATION OF THE

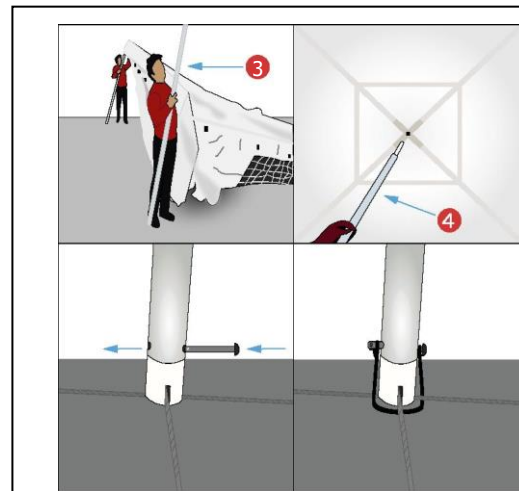


The two legs with no. 3 are attached to the 5 brackets.


Then, the middle pole with no. 4 is attached to the slot in the middle, the lower part of the pipe is placed on the steel rope.

The middle pole is slid on the wire rope and attached to the 2 wire ropes and locked with the fixing pin.

4) INSTALLATION OF TENT FEET

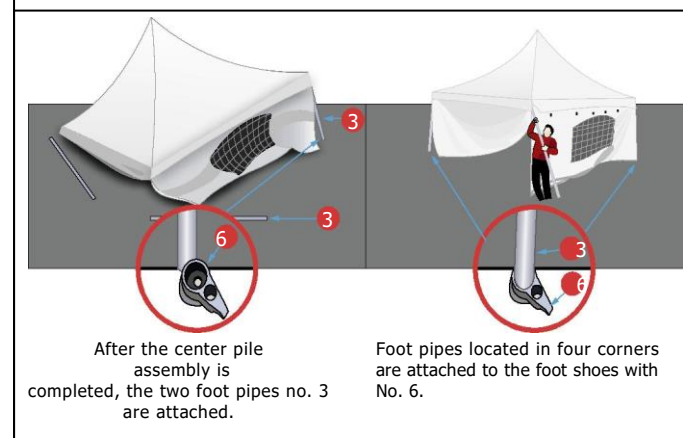

5) FIXING THE TENT

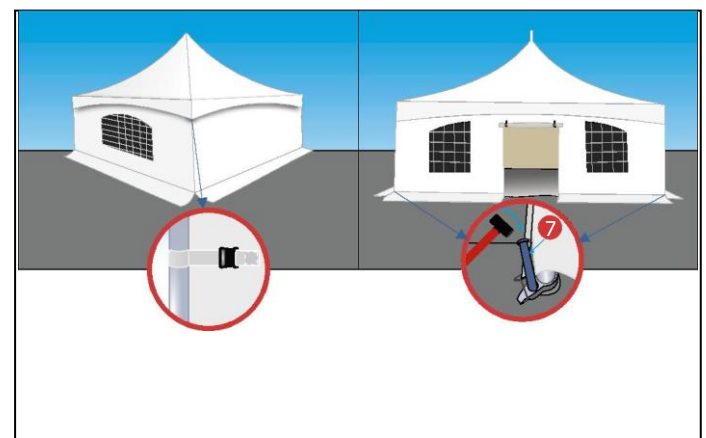

Side curtain columns (tying ropes) are connected from the inside to the frame by means of locking plastics. The side curtains are fixed to each other from the outside by means of textile zippers. The tensioning process is performed by attaching the tensioning ratchets in the four corners with the hooks located in the foot shoes. After the tent is leveled, nail piles are driven through the holes in the foot shoes and fixed to the ground.

Please Read the QR Code for the Pitching Video.

